

Korg Electribe 2 Menu

Pattern

BPM
Swing
Beat
Length
Pattern Level
MFX Type
Clear MFX Motion
Key
Scale
Chord Set
Gate Arp
Alternate 13-14
Alternate 15-16
Last Step
Groove Type
Groove Depth
Voice Assign
Part Priority
Motion Seq
Trg. Pad Velocity
Scale Mode

Step Edit

- 1** Step Number
- 2** Note
- 3** Gate Time
- 4** Velocity

Part Utility

- 1 Copy Part
- 2 Copy Part Sound
- 3 Clear Sequence
- 4 Clear Motion

Global Parameter

- 1 Trigger Mode
- 2 Velocity Curve
- 3 **Clock Mode**

Auto
Internal
External USB
External MIDI
External Sync

- 4 Global Midi Ch.
- 5 **MIDI Receive Filter**

Off
Short
Short + Program

- 6 **MIDI Send Filter**

Off
Short
Short + Program

- 7 Sync Polarity
- 8 Sync Unit
- 9 Metronome
- 10 Tempo Lock
- 11 Knob Mode
- 12 Touch Scale Range

- 13** LCD Contrast
- 14** Audio In Thru
- 15** Battery Type
- 16** Auto Power Off
- 17** Power Save Mode

Data Utility

- 1** Export Pattern
- 2** Import Pattern
- 3** Initialize Pattern
- 4** Export Audio
- 5** Export P.Set Audio
- 6** Card Format
- 7** Factory Reset
- 8** Software Update

Event Rec/Play

- 1** Event Recorder
- 2** Event Player