

CHANNEL 1

INPUT

LINE

LINE B

SELECT

LEVEL

MAX

HIGH

MID

LOW

EQUALIZER

ON

PFL

10

9

8

7

6

5

4

3

2

1

0

CHANNEL 2

INPUT

LINE

PHONO

SELECT

LEVEL

MAX

HIGH

MID

LOW

EQUALIZER

ON

PFL

10

9

8

7

6

5

4

3

2

1

0

CHANNEL 3

INPUT

LINE

PHONO

SELECT

LEVEL

MAX

HIGH

MID

LOW

EQUALIZER

ON

PFL

10

9

8

7

6

5

4

3

2

1

0

CHANNEL 4

INPUT

LINE

LINE B

SELECT

LEVEL

MAX

HIGH

MID

LOW

EQUALIZER

ON

PFL

10

9

8

7

6

5

4

3

2

1

0

CHANNEL 5

INPUT

LINE

MICRO

SELECT

LEVEL

MAX

HIGH

MID

LOW

EQUALIZER

ON

PFL

10

9

8

7

6

5

4

3

2

1

0

CHANNEL 6

INPUT

LINE

MICRO

SELECT

LEVEL

MAX

HIGH

MID

LOW

EQUALIZER

ON

PFL

10

9

8

7

6

5

4

3

2

1

0



BALANCE

C

LEFT

RIGHT

PHONES

PFL

MIX

SELECT

LEVEL

3

4

5

6

7

8

9

10

0

LEFT

RIGHT

+8

+5

+3

+1

0dB

-1

-3

-5

-7

-10

-15

-20

POWER

MASTER 1

10

9

8

7

6

5

4

3

2

1

0

MASTER 2

10

9

8

7

6

5

4

3

2

1

0

BX-14

CROSSFADER

CH 1-2

CH 3-4