



LCD Display

- ❶ DUAL
- ❷ SPLIT
- ❸ TOUCH
- ❹ DSP
- ❺ VOICE/STYLE/DEMO/SONG
- ❻ RECORD / STYLE RECORD
- ❼ MEASURE
- ❽ BEAT
- ❾ TEMPO
- ❿ CHORD
- ⓫ MEMORY / ONE TOUCH SETTING
- ⓫ LEFT / RIGHT HAND LESSON MODE
- ⓫ NOTE Indication
- ⓫ FILL A / B
- ⓫ TREBLE CLEF
- ⓫ BASS CLEF

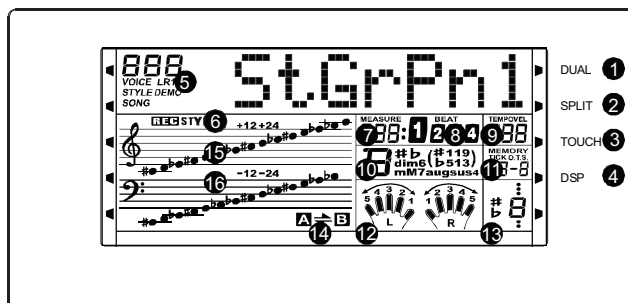

Rear Panel

- ❶ POWER ON / OFF switch
- ❷ POWER Jack
- ❸ AUX OUT L/MONO jack
- ❹ AUX OUT R jack
- ❺ AUX IN jack
- ❻ SUSTAIN PEDAL jack
- ❼ ASSIGN PEDAL jack
- ❽ MIDI IN jack
- ❾ MIDI OUT jack
- ❿ USB jack

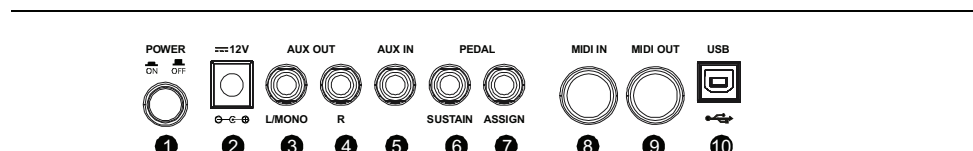

Top Panel

- ❶ PITCH BEND / MODULATION joystick
- ❷ PHONES 1 jack
- ❸ PHONES 2 jack

