
ALLEN&HEATH Knowledge-base article *XONE:064 Xone:22 Crosstalk fix Copyright © 2011 Allen & Heath Limited. All rights reserved Allen & Heath Limited Kernick Industrial Estate, Penryn, Cornwall, TR10 9LU, UK

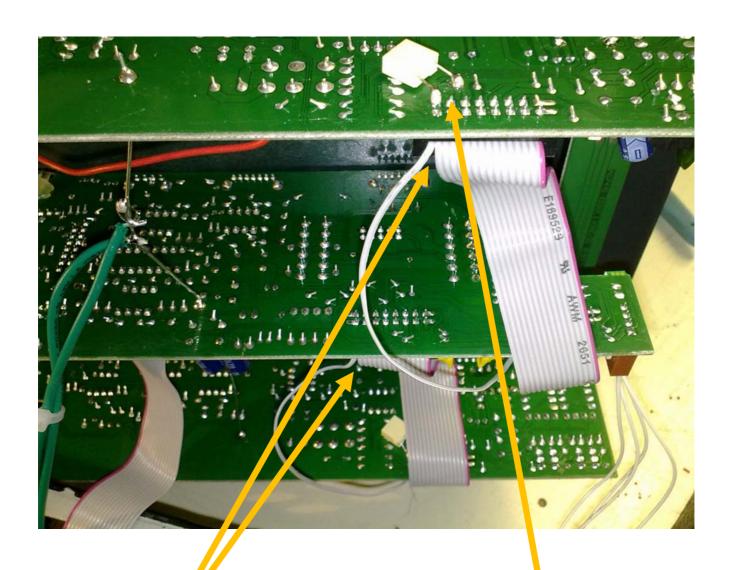

Separate the last conductor from the 16way IDC and pull away from rest of harness.

Solder AF0616 330N capacitor between pin 16 and ground on both input PCBs